



 




# 46RX USER GUIDE

This User Guide tells you what the displays on the 4RX family of receivers mean. The front of each unit contains the display panel shown below.

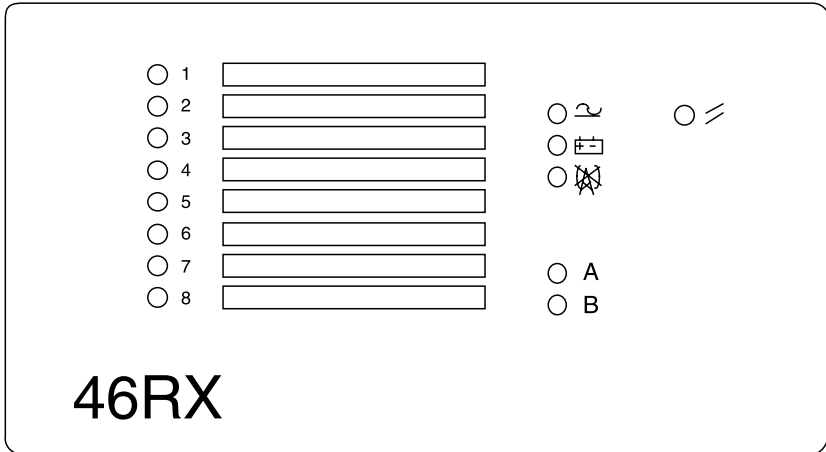


The vertical column of eight lamps indicates the status of each detector. Next to the lamps are spaces for you to write the names or locations of the sensors. The symbols on the right of the panel have the following meanings:


-  Power
-  Transmitter Low Battery
-  Jamming
- A** Common Output A
- B** Common Output B
-  Reset. (Press button to cancel alarms and sounder. Check with Installer.)

The 46RX family of receivers can be used for many different applications. Ask your Installation Company for details on what the symbols mean in your application.


This side explains the various displays you may see on the control panel. In the diagram below ● means a lamp glows steadily, while ✨ means a lamp flashes.

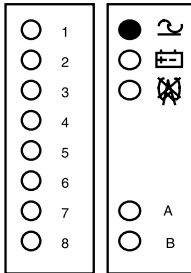


Power ON

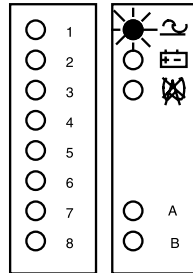


AC power OFF, backup battery working.

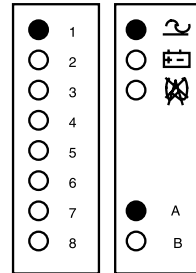


Alarm (A) channel 1

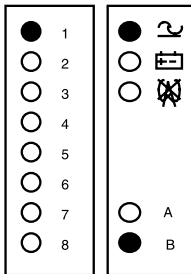


Tamper (B) channel 1.

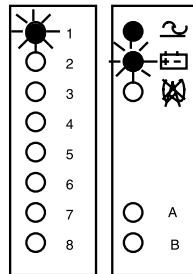

Transmitter battery low (channel 1).  
Call Engineer.

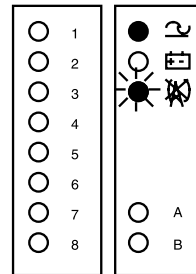

Jamming detected  
Call Engineer.

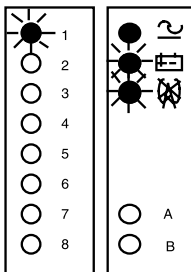

Transmitter No 1 jammed ON. Call Engineer.